

CPC6128
MICRO COMPUTER
CTM644
COLOUR MONITOR
GT65 GREEN MONITOR

SERVICE MANUAL

PRICE: £8.00

CONTENTS	Page
Safety Test	2
Keyboard Exploded View and Parts List	2
CPC6128 Basic Hardware Analysis	4
Function Diagrams	5
Function Diagrams	5 6 7
Software Errors	7
Diagnostic Flow Chart	8,9,10,11
Alignment Checks	12,13,14,15
CPC6128 Main PCB	16,17,18
CPC6128 CPU Circuit Diagram	19,20
Electrical Parts List	21
GT65 Exploded View and Cabinet Parts List	22
GT65 Circuit Diagram and Voltages	23
GT65 Main PCB and Alignment Instructions	24
GT65 Electrical Parts List	25
CTM644 Cabinet Drawing and Electrical Parts List	26
CTM644 Electrical Parts List and Alignment Instructions	27
CTM644 Electrical Parts List and Voltages	28
CTM644 Circuit Diagram	29,30
Main PCB	31,32
Interface Circuit Diagram	33,34
Disc Control Circuit Diagram	35,36
Cassette Control Circuit Diagram	36
Mechanism and Mechanical Replacements	37
Technical Specification	Back page

SAFETY TEST

All Monitors are safety tested to the following specifications.

1). Flash Test

Test at 3kV between the live and neutral of the mains lead joined together and and ALL accessible metal points on the exterior of the set.


2). Insulation Resistance Test

Test between the live and neutral of the mains lead joined together and ALL accessible metal points on the exterior of the set to show a resistance of at least 4Mohm.

If after servicing there is any doubt about continued electrical safety the above tests should be carried out.


AMSTRAD CONSUMER ELECTRONICS PLC BRENTWOOD HOUSE, 169 KINGS ROAD, BRENTWOOD, ESSEX CM14 4EF. Telephone: Brentwood (0277) 228888. Telex: 995417 AMSELE G.


KEYBOARD EXPLODED VIEW

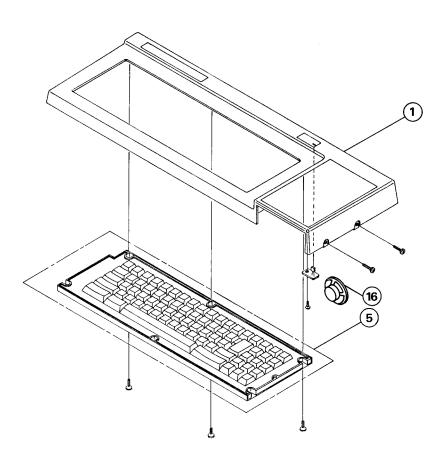

KEYBOARD PARTS LIST

Sym	Description	Part No.
1	Cabinet Top Assembly	170855
2	Frame FDD	170856
3	Knob Volume	170806
4	Cabinet Bottom	170857
5	Keyboard Assembly ESU-244	170858
6	Compact Floppy Disc Drive	190005
	EME-155	
7	Volume Rotary K121L0Z0T-20KB	170807
8	Jack RCA 3.5 HSJ1061-01-440	170022
9	User Port Socket HXC0730-01-010	170023
10	Jack DIN TCS4450-01-101	170850
11	Jack DC HEC0470-01-630	170024
12	Jack DIN TCS4460-01-1011	170025
13	Cord DC 14550401	170822
14	Relay G4S-1112P-1-B-19	170123
15	Cord Connector 8W6Q004A	170862
16	Speaker C040K01K2451	170124

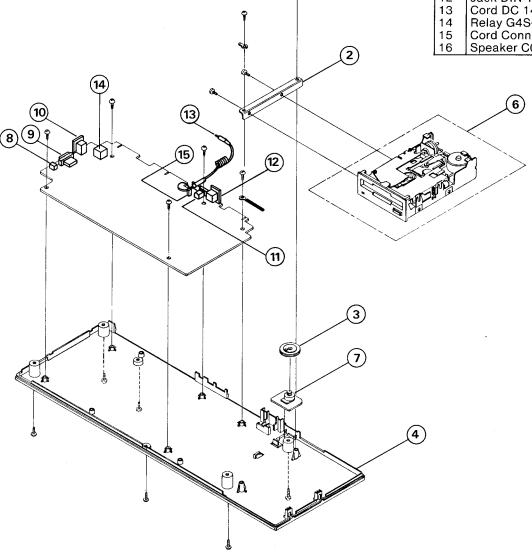


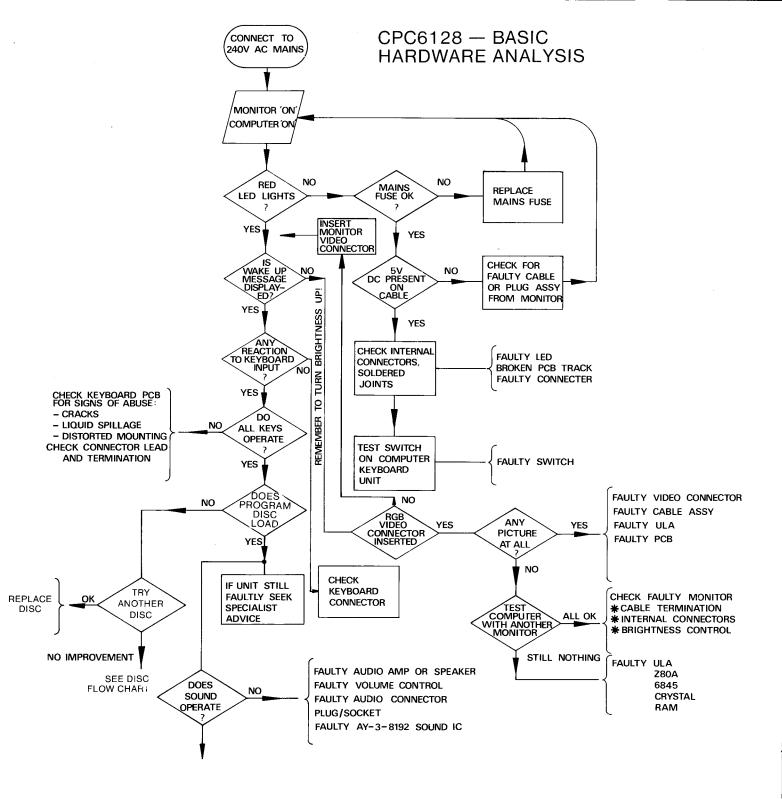



Full diagnostic tests on the C.P.U. can be carried out using the Amstrad RP2 Test Pack.


Please contact Amstrad PLC for information on same.


FUNCTION DIAGRAMS

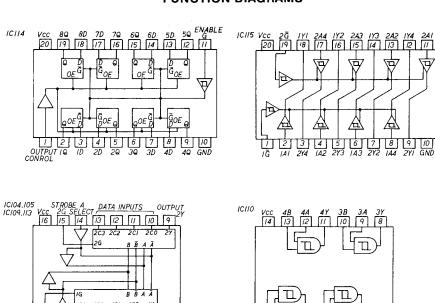


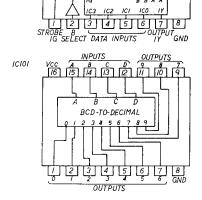

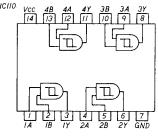

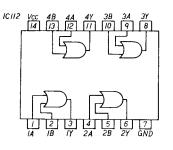

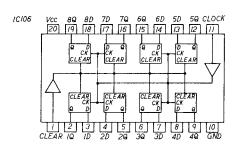

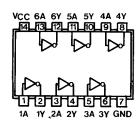



CPC6128 FUNCTION DIAGRAMS


FUNCTION FOR A MICROCOMPUTER AND IC'S

IC108	
vss 🕧 🔾	40 VSYNC
RES 2	39 HSYNC
LPSTB 3	38 RAO
MA 0 4	37 RA1
MAI 5	36 _{RA2}
MA2 6	35 RA3
маз [7]	34 RA4
MA4 8	33 Do
MA5 9	32 _{D1}
MA6 10	31 D2
MA7 [[]	30 D3
MA8 [12]	29 D4
MA9 [3]	28 _{D5}
MAIO [4	27 _{D6}
MAII [15]	26 _{D7}
MA12 16	25 cs
MA 13 [17]	₽4 RS
DISPTMG [B	23] _E
CUDISP 19	22 R/W
Vcc 20	21] _{CLK}

	IC107	_	IC III
	PA3 ++ [40-PA4 AII-	40 A10
1/0	PA2 ** 2	39 PA5 VO ADRESS A12 2	<u>39</u> -+A9
PORT A	PA 1 - 3	38 PA6 PORT A A13-3	38 →48
DEAD	PA0 - 4	37 PA7 A14 4	37] →A7
READ INPUTS CHIP SELECT	5 RD → 5	36+WR WRITE CONTROL A15+5	36 -A6 ADRESS BUS
SELECT	r C\$ → <u>6</u>	35 ← RESET Ø → 6	35 -+⊿5
	GND 7	34D0 D47	34 → _{A4}
PORT	[A1 → 8]	33 + Di DATA BUS D3 - 8	33 → _{A3}
ADRESS INPUTS	(A0 → 9	32D2 D59	32]→ _{A2}
	(PC7 10	37 D3 DATA BASS D6 10	31 → _{A1}
	PC6 ** [1]	30 +D4 +5V-[/]	30 → _{A0} J
	PC5 12	29 D5 D2 [2]	29 ← GND
L/O	PC4 + 13	28 D6 DATA BUS D7 [3]	28 → RFSH SYSTEM
PORT C	PCo [4]	27 ++D7 D0 [4]	27 → MI CONTROL
	PC 1 ** 15	26 Vcc D1 15	26 ← RESET ← CPU CONTROL
	PC2 [6]	25 → PB7 CPU INT → [6]	25 - BUSRQ + - CPU
	PC3 17	24PB6 CONTROL NMI - 17	24 - WAIT BUS CONTROL
1/-	(₽B 0 ** B	23 +PB5 1/0 HALT + 18	23 → BUSAK —
I/O PORT B	PB1 ** 19	SYSTEM (MREQ + 19	22 → WR SYSTEM
	PB2 + 20	21-PB3 CONTROL TORO - 20	21 → RD CONTROL

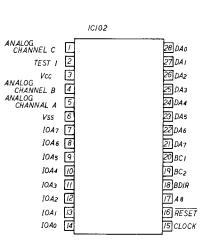

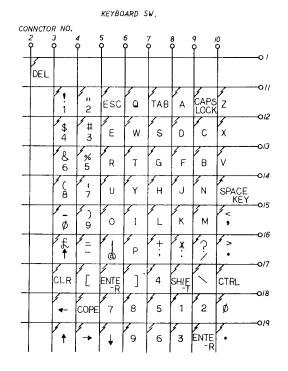

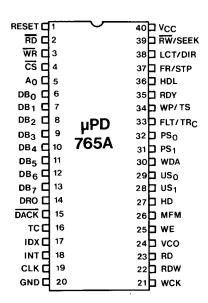

Software Errors

If a drive fault is reported the fault may be a software problem. Before investigating the drive please carry out the following checks to ensure it is not a software problem.

Detection and Correction of "Soft Errors"

Soft errors are usually caused by the following reasons.

- 1) Random external noise of several usec or less.
- 2) Minute off-tracking and shifting of write timing that are not detected during the write operation which can cause the soft error during the read.

To remedy such soft errors, take the following procedures at the controller side.

- 1) Repetitive reading on the track by 10 times or more until the data is restored.
- 2) When the data is not restored by step 1, access the head to the adjacent track in the same direction as move previously, and thereafter return the head to the original track.
- 3) Repeat the step 1.
- 4) If the data is not restored by the above steps, the error cannot be remedied

Write Error

When an error is caused during the write operation, the error is usually detected during the next rotation through the read operation called "Write check".

To correct the error, repeat the write operation again and carry out the Write check.

If the result is still incorrect even after the write operation is repeated more than 10 times, either the disc or the drive are working incorrectly. To find out the trouble source, carry out the read operations with another track. Should the error still be found, change the disk and repeat the above procedures. Should error still be found, the drive should be considered defective. If the error is removed, the original disk must be defective. Discard it.

Seek Error

- 1) Step motor or step motor drive circuit is defective.
- 2) The torque of the carriage is not correct.

Restoration procedures from the seek error.

Make the re-calibration to the track OO. Then, carry out the re-seek to the original track.

Notes

- 1) Always ensure the head is clean.
- 2) Index/Sector Factor (Ready Defect)

As the unit has Optional Read Output


It is normally not ready until 2 revolutions are made after the disk insertion.

Diagnostic Flow Chart

This chart must be used in conjunction with the Alignment Procedures.


This chart is for information only and does not guarantee an exact diagnosis. For warranty purposes any faulty drive mechanism must be returned to Amstrad for replacement. Service Agents should not attempt any repairs on the mechanism or to its P.C.B. P.No. 30001.

3-A

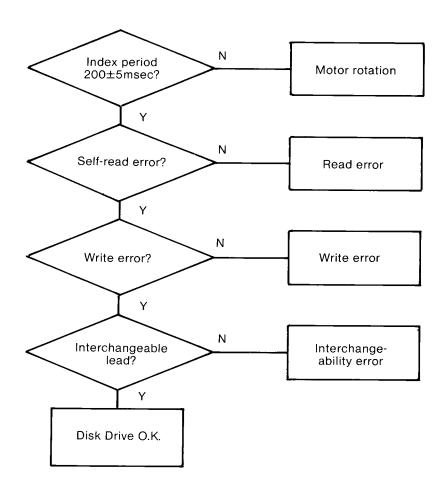


FLOW CHART (cont)

3-B

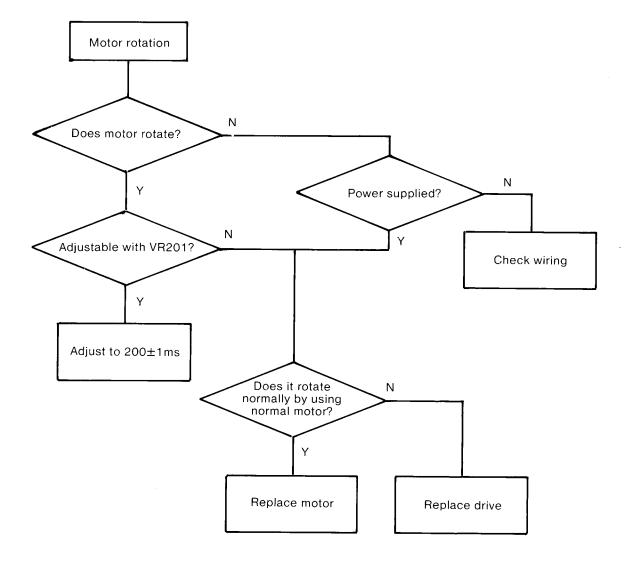



FLOW CHART (cont)

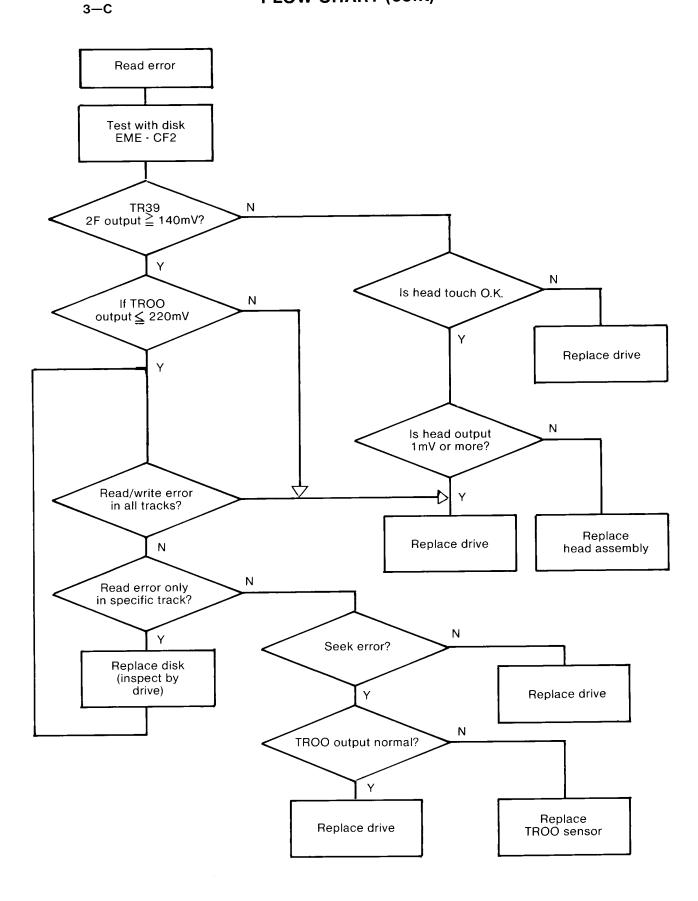

FLOW CHART (CONT)



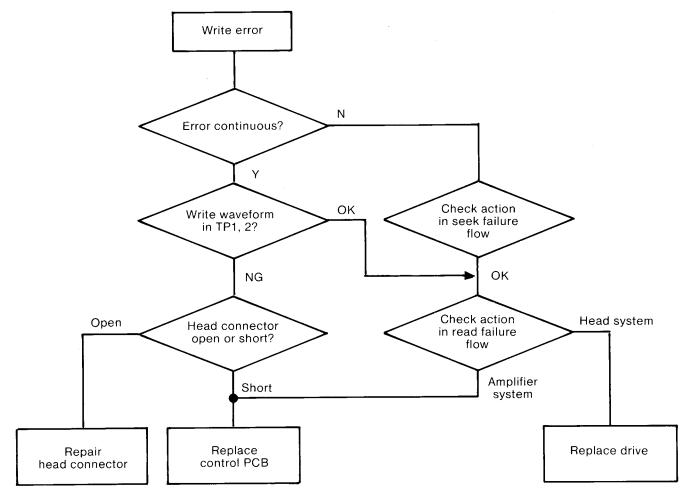

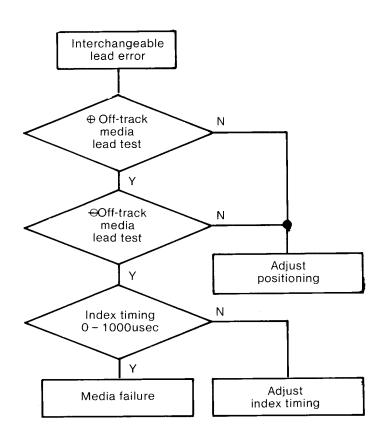

The data contained in the following 4 pages is for information only. Service Agents must not carry out any repair or adjustment to the Drive mechanism and its associated PCB 30001 during warranty. Faulty mechanism must be returned to AMSTRAD for exchange.

Alignment Checks

Please use this this information in conjunction with the diagnostic flow chart.

Equipment required: Double Beam Scope; EME - CF2 Test Disk (please refer to disk notes for usage).

The following checks can be carried out in routine servicing. If the wave patterns do not appear this confirms a fault with the mechanism. Before attempting any replacement check these waveforms thoroughly.

Content of adjustment and checking	CE DISK EME CF2
1. Radial adjustment by use of Track 19 (Fig. 1).	0
2. Adjustment of the index burst by use of Track 39 (Fig. 2).	0
3. Azimuth check by use of Track 39 (Fig. 3-4).	0

List of Test Points

Test point	Name of signal
TP 1	Read signal of filter outlet
TP 2	Read signal of filter outlet
TP 3	Signal ground
TP 5	TROO sensor output
TP 9	Index signal
TP 11	Signal ground

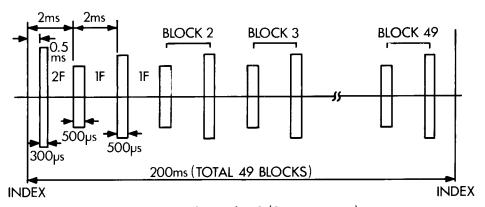


Fig.1 Waveform of T19 (Servo pattern)

ALIGNMENT CHECKS

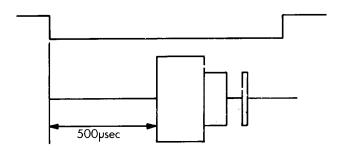


Fig. 5-1 Index burst waveform

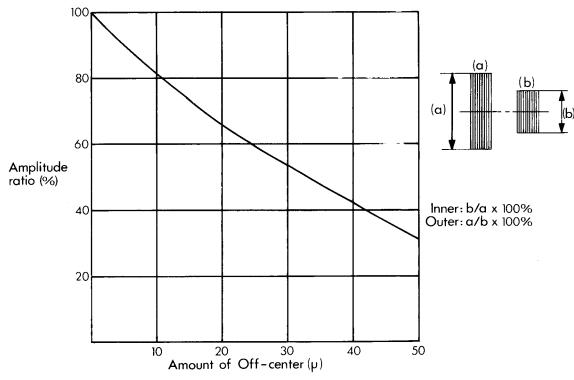


Fig. 5-2 Off-centre calibration curve (Effective width of read head is 180u)

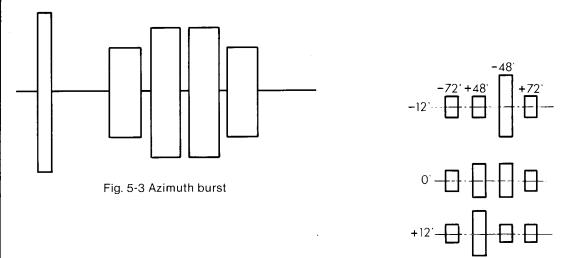
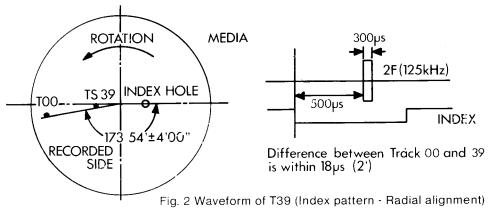


Fig. 5-4 shows azimuth burst in the cases of azimuth -12', 0' and +12.

ALIGNMENT CHECKS (cont)




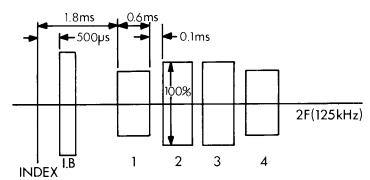


Fig. 3 Waveform of T39 (Azimuth, alignment)

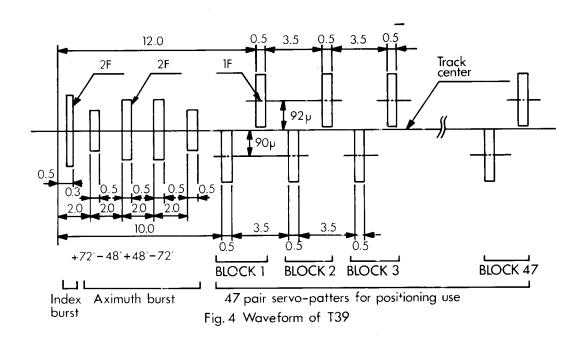

ALIGNMENT CHECKS (cont)

1) Check Positioning

- 1) Load CE Disk.
- 2) Set up track OO, Motor off.
- 3) Scope to TP5.
- 4) Adjust OO Sensor (8 on Fig. 6) so that scope shows correct difference as Fig. 2.

2) Adjustment of Index Timing

- 1) Load the CE Disk (refer to disk info)
- 2) Step the disk to the track 39.
- 3) Synchronise the oscilloscope by TP9 (INDEX). Set the time base to 0.1msec/DIV.
- 4) Connect the probe to TP1.

Connect the ground probe to TP3 and TP11 (ground) of PCB.

Set the input to AC and set the vertical axis to 20mV/DIV.

- 5) Measure timing between sweep start and an initial data pulse. It should be 500 usec ±500 usec. When the timing is not within this range, proceed with the following adjustment. (Refer to Fig. 5-1).
- 6) Loosen the two screws fixed LED printed board. Adjust the position of LED printed board so that the timing is 500 usec \pm 100 usec.
- 7) Re-check the timing.
- 8) Seek to the track OO and make sure that the timing is within 500 usec \pm 200 usec. Tighten the screws. (Fig. 5 1).

3) Check of Head Output

This check is effective only when making write and read check as described below. If the output level is less than the prescribed output, clean the head before check. Disk used for this check must be in good condition.

- 1) Load the CE Disk.
- 2) Select track 39.
- 3) Connect one of the probes of the oscilloscope to TP1 of the printed circuit board, another probe to TP2, and the probe to ground to TP3, TP11 (ground).

Invert one channel, and set it to Add input, set input to AC, and set the vertical axis to 50mV/DIV and the horizontal axis to 20msec/DIV.

4) Make sure tha average output level is the following value or more: 140 mV p-p (SN 25dB or more) If the output is less than the above-described value, replace the head.

4) Adjustment of Positioning

- 1) Load CE disk.
- 2) Select Track 19.
- 3) Monitor the output in the same way as the head output inspection.
 Calculate the off-track amount in reference to the calibration graph, showing the interrelation between the burst amplitude ratio and off-track amount. (Refer to Fig. 5-2).
- 4) The average of amplitude ratio should be below 26 um.

If it is not within this range, make the following adjustment.

i) Loosen the bolt of the rotation stopper which fixes the screw shaft (Fig. 6-3).

Rotate the screw shaft and adjust it in such a way that the amplitude ratio may become below 15 uM. Tentatively set the bolt at that position.


ii) Make the to track step to the inner and outer circles and bring it to the original position. Make sure that the adjustment is all right. Then, tighten the bolt.

5) Confirmation of Head Azimuth


- 1) Load the CE Disk
- 2) Select Track 39.
- 3) Synchronise the probe of the oscilloscope by TP9 of PCB and connect another probe to TP1, and the probe ground to TP3, TP11 (ground). Set the input to AC, the vertical axis to 10 mV/DIV, and the horizontal axis to 0.5 msec/DIV. Make sure that the two outside burst waveforms are smaller than two inside burst waveforms as shown in Fig. 5-3.

Note: Signal preceding the azimuth burst is the index burst.

If the azimuth is still incorrect reeplace the head assembly.

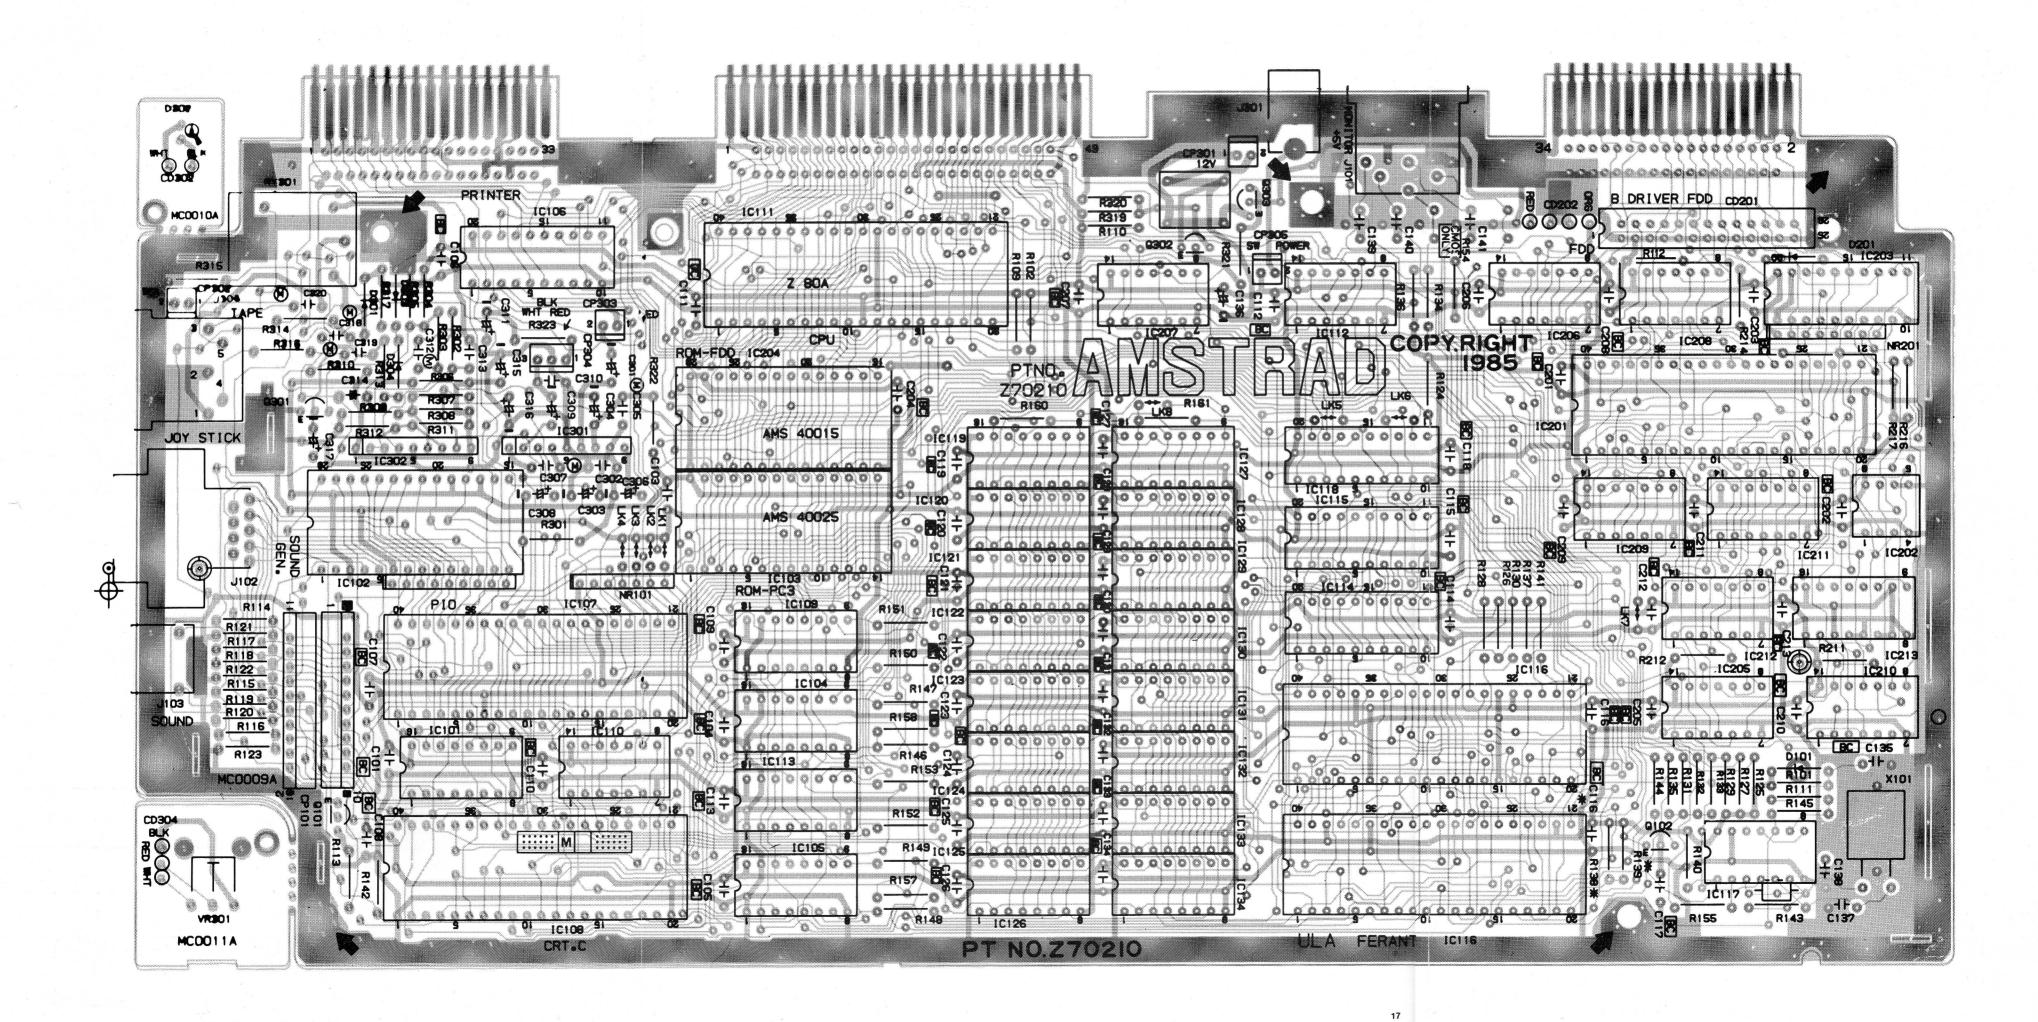

16

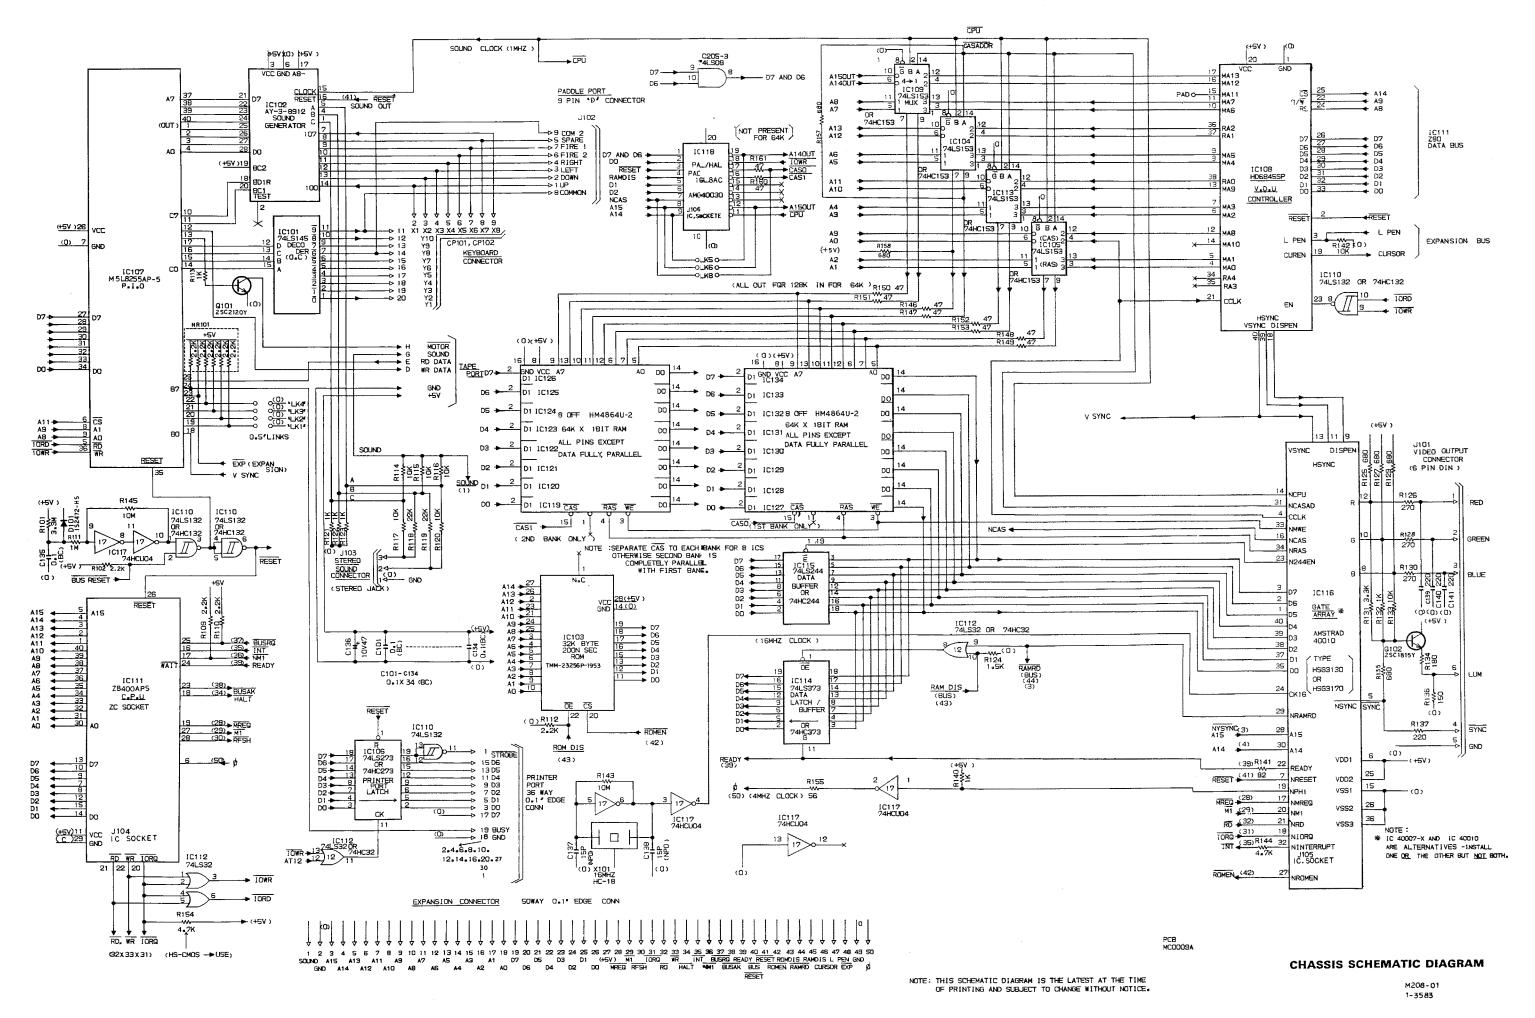


ELECTRICAL PARTS LIST

[a. a.		Τ
Circ. Ref.	Description	Part No.
Carbon Film F		
47ohm	R146-153, 161, 162	10020
56ohm	R155, 306	10022
82ohm	R141	10030
150ohm	R136	10036
180ohm	R134	10037
220ohm	R137	10040
270ohm	R126, 128, 130	10042
560ohm	R317	10050
680ohm	R125, 127, 129, 135, 157, 158, 301	10052
1kohm	R113, 121-123, 132, 140, 211, 212, 216, 313, 315, 321	10061
1k5ohm	R124	10065
2k2ohm	R102, 109, 110, 112, 214	10069
3k3ohm	R131	10073
4k7ohm	R144, 310, 323	10077
10kohm	R114-117, 120, 133, 142, 217,	10085
	309, 312	
18kohm	R308, 311	10091
22kohm	R118, 119, 304, 305	10093
47kohm	R302, 303, 307, 319, 320	10101
470kohm	R314	
1Mohm	R111	10147
3M3ohm	R101	170867
10Mohm	R143, 145	170868
40hm7 ¼W	Fuse R322	170866
100ohm½W	R316	1400183
Ceramic Capa		
15pF	C137, 138	170869
220pF	C139-141, 310	400107
270pF	C313	170126
470pF	C306	24004
0.1uF	C101-135, 201-213	24020
Electrolytic Ca		
1uF/50V	C309, 311, 314, 317, 318	20062
22uF/10V	C308	20025
47uF/10V	C136, 303, 306	1400244
100uF/10V	C301, 304	20028
100uF/16V	C315	20028
Polycarbonate	Capacitors (All working voltage !	50V D.C.)
0.001uF	C312	170217
0.01uF	C305	170128
0.047uF	C318	1409178
0.068uF	C302	170129
0.1 uF	C319, 320	170851
Diodes		
D101 202 204	1S2472-HS	1 170115
D101, 303, 304		
D101, 303, 304 D201	DS442XFA5	170816
	DS442XFA5 10E1 SLP-155B (R)	170816

	T_	
Circ. Ref.	Description	Part No.
IC's IC101 IC102 IC103 IC104, 105, 109,	HD74LS145 AY-3-8912 TMM-23256P-1953 HD74LS153	170101 40001 40025 170103
113 IC106 IC107 IC108 IC110, 210 IC111 IC112, 207 IC114 IC115 IC116 IC117 IC118 IC119-134 IC201 IC202 IC203 IC204 IC205 IC204 IC205 IC206, 208 IC209 IC211 IC212 IC213 IC301	HD74LS273 M5L8255AP-5 HD6845SP HD74LS132 Z8400APS HD74LS32 HD74LS373 HD74LS244 HSG3130/3170 TC74HCU04P PAL 16L8AC MSM3764-20RS UPD765AC-2 FDC9216BT SN74HC240N TMM-23128P-1851 DN74LS08 DN74LS08 DN74LS136 DN74LS136 DN74LS74 TC74HC161P LA4140	170104 170105 170106 170107 40080 40013 170109 40010 40008/A 40031 170110 40018 170812 170863 40015 40011 40019 40016 40012 40014 170864 170811
IC302	LA6358S	170814
Transistors Q101 Q102, 301, 302 W303	2SC2120Y 2SC1815Y 2SC950Y	170113 170114 170448
Miscellaneous		
J101 J102 J103 J104, 105 J106 J301 J302 VR301 CD302 CD201 FDD201	Jack DIN Socket D Sub 9 Jack RCA3.5 Socket IC 20 Pin DIL Socket IC 10 Pin DIL Jack D.C. Jack DIN Vol. Rot. 20k D.C. Cord Cord Connector Compact Floppy Disc Drive EME-155	170025 170023 170022 170021 170865 170024 170850 170807 170882 170862 190005
NR101 NR201 RY301 SP301 X101	R. Network Exb P86222J R. Network Exb P87681J Relay G4S-1112P-1-B-19 Speaker CO40KO1K2451 Crystal HC-18RW 16MHz	170860 170861 170123 170124 170859


No part numbers are given for any parts on PCB30001, should there be any electrical fault with that PCB Service Agents should return the whole Disc Drive Mechanism complete with the PCB for replacement.

GT65 CABINET EXPLODED VIEW

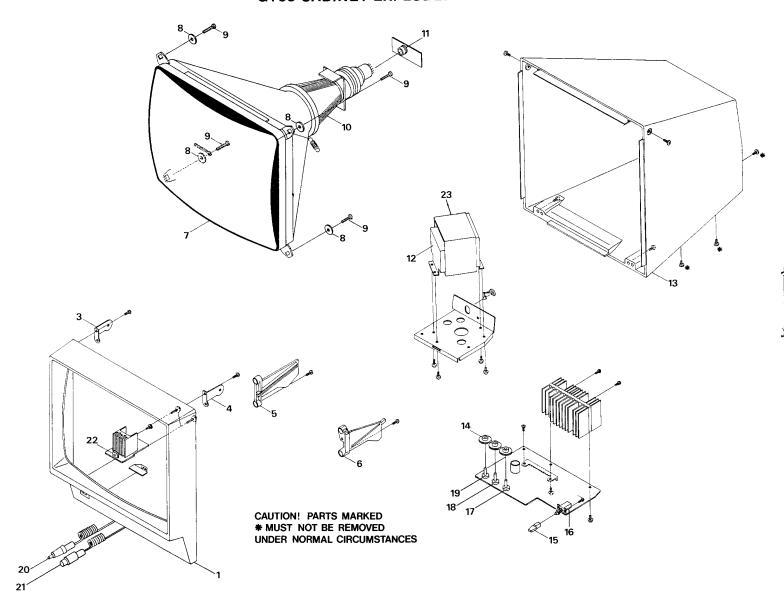


GT65 CABINET PARTS LIST

Sym	Description	Part No.
1	Front Cabinet	170831
2	Cable Clamp	170502
3	Bracket Cabinet (L)	170504
4	Bracket Cabinet (R)	170503
5	Bracket P.C.B. (L)	170505
6	Bracket P.C.B. (R)	170506
7	C.R.T. Green	170507
8	Metal Washer C.R.T.	170508
9	Fixing Screw C.R.T.	170509
10	Deflection Yoke	170510
11	C.R.T. Socket	170511
12	Power Tx.	S/170832
13	Rear Cabinet	170513
14	Control Knobs	170514
15	Button Power	170515
16	On/Off Switch	170516
17	V. Hold Pot.	170833
18	Contrast Pot.	170518
19	Brightness Pot.	170519
20	D.C. Cord	170316
21	DIN Cord	170317
22	D.C. Jack	170834
23	u Metal Shield	170512/SH

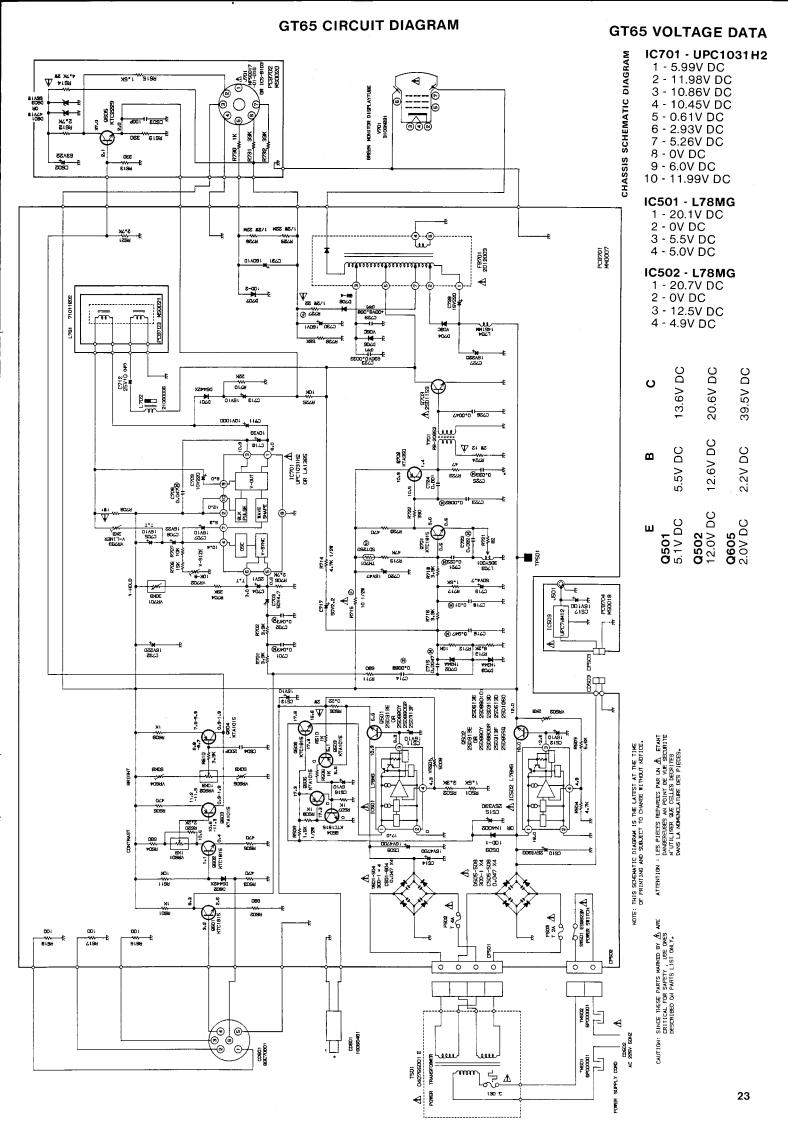

GT65 MAIN PCB

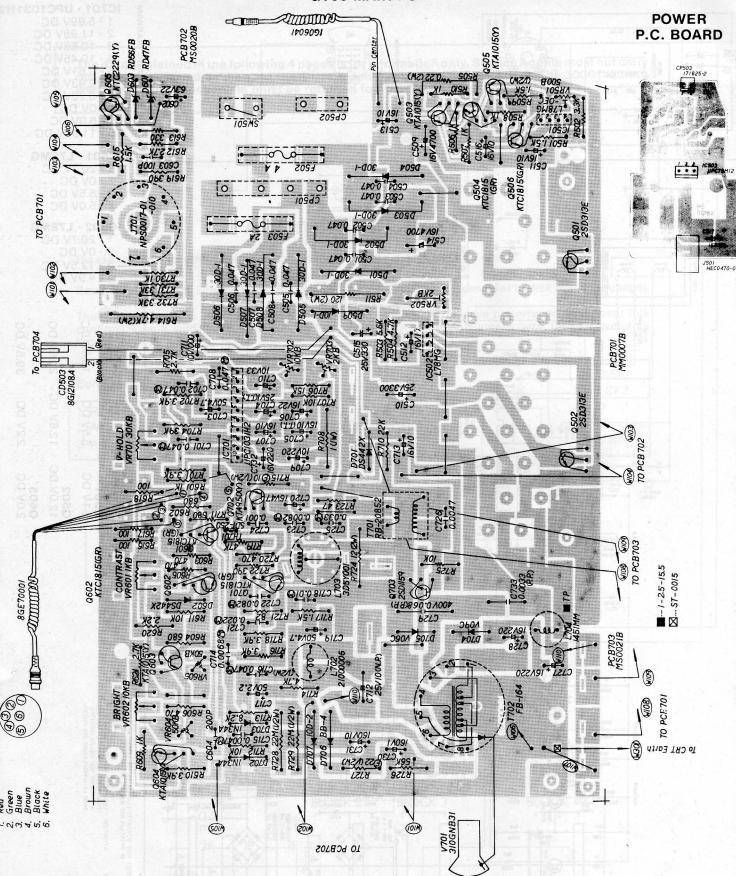

GT65 ALIGNMENT INSTRUCTIONS


STEP	FUNCTION	SIGNAL IN	SIGNAL OUT	METHOD	REMARKS
1.	5V Adjustment.	Monitor Switched on.	A.V.O. across C519.	Adjust VR501 to obtain 5V.	
2.	12V Adjustment.	Monitor switched on.	Emitter of Q502 & Earth.	Adjust VR502 to obtain 12V.	
3.	H. Hold.	Monitor switched on.	Monitor Screen.	Connect Frequency Counter to CRT Heater. Adjust L703 to obtain 15625Hz on Frequency Counter.	NDEX
4.	V. Size & Linearity.	Page Program for Graphics.	Monitor Screen.	Top of the page can be adjusted with VR703 and Bottom of the page can be adjusted with VR702.	The adjustments are Linearity & V. Size respectively.
5.	Centering Adjustment.	Program Border - 26.	Monitor Screen.	Adjust the magnet on the back of the neck to centre the border.	

GT65 ELECTRICAL PARTS LIST

Value	Circuit Reference	Part No.	
Carbon Film Resistors (1/4W)			
47ohm 82ohm 100ohm 330ohm	R723 R721 R616-618 R613	10021 10030 10032 10044	
390ohm 470ohm 680ohm	R619, 722 R603-605, 606, 720 R602, 604, 711	10046 10048 10052	
1kohm 1k5ohm 2k2ohm	R506-508, 510, 601, 609, 730 R501, 717 R620	10061 10065 10069	
2k7ohm 3k3ohm 3k9ohm 4k7ohm 5k6ohm	R612, 621, 705 R502 R610, 701, 702, 716, 718 R504, 714 R503	10068 10073 10075 10077 10079	
8k2ohm 10kohm 15kohm 22kohm	R713 R611, 707, 712, 725 R706 R710 R731, 732	10083 10085 10089 10093 10097	
39kohm 47kohm 56kohm	R704 R719 R726	10097 10099 10101 10103	
Carbon Film Re 22ohm 1k5ohm 22Mohm	esistors (½ W) R727 R509, 615 R728, 729	170601 1422126 170602	
Metal Film Res	sistors	1	
1ohm/1W 0.22ohm/2W 4ohm7/2W 12ohm/2W	R708 R505 R614 R724	170603 170604 170605 170606	
Fuse Type Res	R715	809256	
Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF	C603 C604 C724 C726 C501-508	1422144 400107 1400125 170600 24015	
Electrolytic Ca	pacitors		
1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V	C730 C717 C703, 719 C511-513, 516, 705, 707,	1422151 809246 1400240 20024	
10uF/25V 10uF/160V 22uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V	C712 C731 C706 C602 C710 C720 C517	20037 170608 20025 170609 170610 1400244 800370	
220uF/10V 220uF/16V 330uF/25V 1000uF/10V 3300uF/25V 4700uF/16V	C709 C727, 728, 732 C515 C711 C510 C509, 514	170611 20029 170836 800372 170612 170613	
Polystyrene Ca	pacitors (All 50V. D.C. W.)		
0.0047uF 0.0068uF 0.0082uF 0.01uF 0.022uF 0.033uF	C715 C714 C723 C718 C721 C725	170437 170614 170615 170439 170616 170617	
0.047uF 0.082uF	C701, 702, 708, 716 C722	170422 170618	

Value	Circuit Reference	Part No.
Polypropylene 0.0033uF/630V	C733	170619
0.068uF/400V	C729	170620
1	C704	170621
Circuit Ref.	Description	Part No.
I.C.s IC501 IC502	L78MG - OEC L78MG	170446 170446
IC701 IC503	UPC1031H2 UPC78M12	170622 1422278
Transistors		
Q501, 502 Q503, 505, 603, 604	2SD313 KTA1015Y	50005 170453
Q504, 506, 601, 602, 701	KTC1815	170447
Q605 Q702 Q703	KTC2229Y KTA950Y 2SD1159	170624 170448 170623
Diodes		
D501-508 D509	Rect. 30D - IFC Rect. 10D - 1	170625 1400125
D601 D602, 701	Zen. RD47FB Sili. DS442X - BT	170626 1422117
D603	Zen. RD56FB	170627
D702, 703 D704	Ger. IN34A Rect. V09C	170628 170629
D705 D706	Rect. V06C Rect. B B-4	170630 1422116
D707	Rect. 10D-2	1400123
Coils & Transfo	ormers D.Y. 71011202	170510
L702	Linearity CL. 21000006	170631
L703 L704	Horizontal C.L. 305Y001 C.L. 100uH	170632 1400148
T501 T701	Power Tx. 0766001E H.Drive Tx. RB20852	S/170832 170633
T704	F.B./Lopt 2012003	170835
Variable Resist	ors S.F. 500ohm	1422189
VR502, 703	S.F. 2k	1400230
VR601 VR602	ROT. 1k ROT 10k	170518 170519
VR604, 605 VR701	S.F. 50k ROT 30k	920142 170833
VR702	S.F. 10k	1422191
Miscellaneous CD501	D.C. Cord IG060401	170010
CD601	D.I.N. Cord 8GE 70001	170316 170317
F502 F503	4A (T) Fuse 2A (T) Fuse	1400254 1400253
TH701 V701	Thermistor SDT-250S C.R.T. 310GNB31	170635 170507

CTM644 CABINET DRAWING

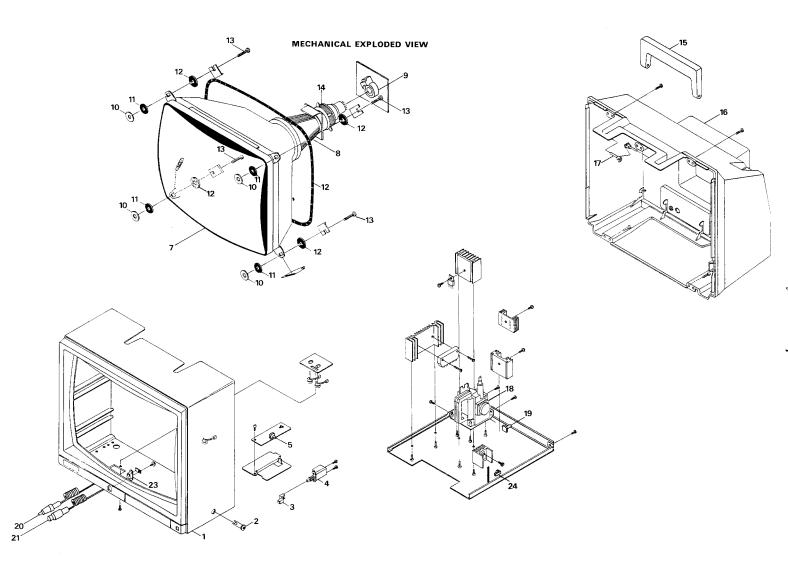

CTM644 CABINET PARTS LIST

Sym	Description	Part No.
1	Front Cabinet	170841
2	Control Knob Brightness	170304
4	Button On/Off	170305
4	Power On/Off Switch	170306
5	Brightness Control	170315
6 7	Degauss Coil	170842
7	C.R.T.	170307
8	Deflection Yoke	170308
9	C.R.T. Socket	170843
10	Metal Washer Bottom	1400011
111	Rubber Washer	1400012
12	Metal Washer Top	1400011
13	Fixing Screw	1400013
14	Static Rings	170311
15	Handle	170312
16	Rear Cabinet	170313
17	Handle Retainer	170314
18	F.B.T.x.	170467
19	V. Hold Control	1400035
20	D.C. Cord	170316/A
21	DIN Cord	170317/A
23	D.C. Jack	170844
24	Service Normal Switch	900101

CTM644 ELECTRICAL PARTS LIST

Value	Circuit Reference	Part No.	
	esistors (all ¼W unless otherw	rise shown)	
100ohm	R810, 901-903	10032	
220ohm	R407, 416	10040	
270ohm	R807, 811, 814	10042	
330ohm	R401, 404, 422	10044	
390ohm	R414	10046	
470ohm	R505, 510	10048	
1kohm	R411, 423, 432, 519, 815, 816	10061	
l i 1k5ohm	816 R420, 421, 441	10065	
1k8ohm	R402, 403, 442	10067	
2k2ohm	R410	10067	
2k7ohm	R904-906	10068	
4k7ohm	R426, 518	10000	
6k8ohm	R415	10077	
8k2ohm	R406, 418, 419	10083	
10kohm	R424, 428, 429	10085	
12kohm	R409	10087	
15kohm	R431, 450	10089	
27kohm	R425	10095	
47kohm	R412, 440	10101	
56kohm	R417	10103	
82kohm	R430, 439	10103	
180kohm	R408	10115	
220kohm	R413	10117	
270kohm	R504	10119	
680kohm	R451	10129	
1ohm2/½W	R443	170401	
470ohm/1/2W	R445	1422125	
680ohm/1/2W	R447	809223	
1kohm/½W	R514-517	1400165	
1k5ohm/1/2W	R448	1422126	
2k2ohm/1/2W	R446	170402	
2k7ohm/1/2W	R802-804	1400166	
180kohm/1/2W	R506, 507	170403	
1Mohm	R801	1400171	
Fuse Type Resistors			
1ohm/¼W	R521	I 809252	
8.2ohm/1/4W	R444	170404	
10ohm/1/4W	R511	809256	
0.82ohm/1W	R438 437,	1422141	
2.2ohm/1W	R435,	1400184	
Cement Resistors			
5.60hm/5W	R501	1422138	
15ohm/7W	R436	170417	

Value `	Circuit Reference	Part No.
Metal Oxide R	esistors	
120ohm/1W 1kohm/1W 3k9ohm/1W 15kohm/1W 0.22ohm/2W 15ohm/2W 33ohm/2W 82ohm/2W 100ohm/2W 3k3ohm/2W 6k8ohm/2W	R449 R503 R505 R805, 812 R513 R512 R509 R520 R433 R427 R405 R502	170405 170406 170407 170408 170409 170410 170411 170412 170413 170414 170415 170416
Electrolytic C	apacitors	!
1uF/50V 1uF/50V 1uF/160V 1uF/250V 4.7uF/50V 10uF/16V 22uF/10V 22uF/250V 47uF/16V 47uF/16V 100uF/35V 100uF/160V 100uF/35V 100uF/400V 220uF/35V 220uF/160V 470uF/25V 470uF/25V 470uF/25V 2200uF/25V	C414 C419 C506 C407, 420 C520 C437 C430 C436 C405, 418 C512 C401 C412, 443, 523 C425 C515 C505 C507 C515 C505 C507 C518 C435, 519 C402, 522 C424	20062 1422151 1422152 1400240 20024 170418 170419 170420 1400244 170421 170422 20028 1422157 1400246 170423 20055 170851 170424 20044 1422262 170425
Ceramic Capa	citors	
22pF/500V 100pF/500V 130pF 180pF/500V 240pF 270pF/2kV 330pF 560pF/500V 680pF 2200pF/4kV 0.001uF/500V 0.001uF/2kV 0.0015uF/2kV 0.0022uF/2kV 0.0047uF	C416 C423, 441 C806 C403 C804 C432 C803, 807 C417 C802 C513 C516, 521 C511, 801 C510, 514 C502-504 C508, 509	1400217 1400218 170426 170427 170428 170429 1422255 1400220 1400213 170430 170431 1422147 170432 1400223 170433

CTM644 ALIGNMENT INSTRUCTIONS

STEP	FUNCTION	SIGNAL IN	SIGNAL OUT	METHOD	REMARKS
1.	Black and White Tracking.		Monitor Screen.	1. Turn R & B Drive Controls VR804 & VR805 fully counterclockwise. 2. Turn R, G & B Bias Controls VR801, 802, 803 fully counterclockwise. 3. Set Ser. Nor. Switch to Ser. position.	Monitor connected to CPC664.
2.	Black & White Tracking.		Monitor Screen. Monitor Oscilloscope.	Adjust 120V at the collector of Q802 with Brightness Control on the Oscilloscope. Rotate the screen control to fully counterclockwise bring it back to obtain a dim line of one prominent colour. Rotate the other two colours till a dim white line is obtained.	Monitor connected to CPC664. If required, adjust the colcur control.
3.			If no satisfact	ory results repeat step 2.	
4.	Vertical Size.	Program the paper edge.	Monitor Screen.	Adjust VR406 to obtain paper edge to be 145mm.	Use non magnetic ruler.
5.	Focus Adjustment.	Program the paper edge.	Monitor Screen.	Adjust Focus Control on the Flyback Tx. for maximum definition & details.	Brightness & Contrast controls set to normal viewing.
6.	5V Adjustment	Switch on the Monitor.	AVO Meter.	Connect A.V.O. across C518 & adjust VR501 to obtain 5V exactly.	
		Th	is adjustment (6) should no	ot be disturbed under normal conditions.	
7.	Sub Brightness Control.	Switch on the Monitor.	A.V.O. Meter.	Connect A.V.O. to collector of Q802. Adjust VR402 to read 120V.	Keep Brightness Control to maximum position.
8.	Sub H. Hold & H. Hold Adjustment.	Switch on the Monitor.	Frequency Counter.	Rotate H. Hold fully counterclockwise. 1. Adjust VR404 to read 14500Hz. 2. Adjust VR403 to read 15625Hz.	Read the Meter across CRT Heater & Earth.


CTM644 ELECTRICAL PARTS LIST

Value	Circuit Reference	Part No.
Polypropylene	Capacitors	
0.012uF/1600V 0.1uF/250V 0.82uF/200V	C431 C501 C429	170434 1400202 170435
Polystyrene Ca	pacitors	
0.001uF	C442	170850
0.0015uF 0.0047uF 0.0056uF 0.01uF 0.015uF 0.039uF 0.047uF 0.068uF	C408 C421 C415 C413, 427 C409 C404 C406 C410, 422, 428	170436 170437 170438 170439 170441 170440 170442 170443
Tantalum Capa	citors	
1uF/16V 2.2uF/16V	C411 C426	1400225 1400226
I.C.s		
IC401 IC402 IC501 IC502 IC503	LA7800 LA7830/UPC1378 STK7308 L78MG UPC78M12	1400106 170444 170445 170446 1422278
Circuit Ref.	Description	Part No.
Transistors		
Q401, 402, 504, 506 Q403 Q404 Q405 Q501 Q502 Q503, 505 Q801-803	KTC1815Y KTA950Y 2SC2271 2SD1397 2SD1207 2SD880Y KTA1015Y 2SC3417	170447 170448 170449 170450 170451 170452 170453 170454


			
Circuit Ref.	Description	Part No.	
Diodes			
D401	Sil. IS2472T	170455	
D402, 403	Zen. RB11EB	1400124	
D404, 506, 508	Rect. DFC10E	1422115	
D405, 407, 408	Sil. TVR 06K	170456	
D406	Rect. BB-4	1422116 170848	
D501-504 D505, 507	Rect. 20E10 Zen. RD 3.6FB	170458	
D509	Rect. RGP 30J	170459	
D510	Zen. SR2M	1400122	
D511,512	Rect. RU4A	170460	
D901-903	Zen. GZA6.2Y	1422114	
Coils & Transfo	ormers		
L401	Linearity Coil 1431MS	11400145	
L501	Line Filter FKOB 160MH14	1400130	
L502	Degauss Coil	170842	
L801	Coil 100uH	1400148	
T401	H. Drive 305Y001	170463	
T402	Pin Cushion 1432MS	170464	
T501	Switching Tx. 8142006	170845	
Switches			
SW401	Slide Switch	900101	
SW501	Power On/Off Switch	170306	
Variable Resist	tors		
VR401	Rot. 500ohm	170315	
VR402	S.F. 5k	1400227	
VR403	S.F. 5k	1400227	
VR404	S.F. 2k	1400230	
VR405	Rot. 20k	1400035	
VR406, 407 VR801	S.F. 1k S.F. 5k (R)	170466 1400197	
VR802	S.F. 5k (G)	1400198	
VR803	S.F. 5k (B)	1400199	
VR804	S.F. 500ohm (R)	1400200	
VR805	S.F. 500ohm (B)	1400201	
Miscellaneous			
FB401	FB/LOPT 3714004	170467	
F501	Fuse 2A (T)	1400253	
TH501	Degauss Element	1400195	
V001	ERP.F5BOM180H C.R.T. 3701B22-TC20	170307	
J501	D.C. Jack	170844	
J801	C.R.T. Socket	170843	
	HPS0092-01-030		


CTM644 VOLTAGES

11 - 0.96V DC	12 - 11.04V DC 13 - 0.89V DC 14 - 11.18V DC 15 - 12.43V DC	2 - 0V DC 3 - 5.4V DC	Q405 - 2SD1397 E - 0V DC B - 0.1V DC C - 98.8V DC Q404 - 2SC2271 E - 0V DC B - 0.3V DC C - 34.1V DC
---------------	---	--------------------------	--

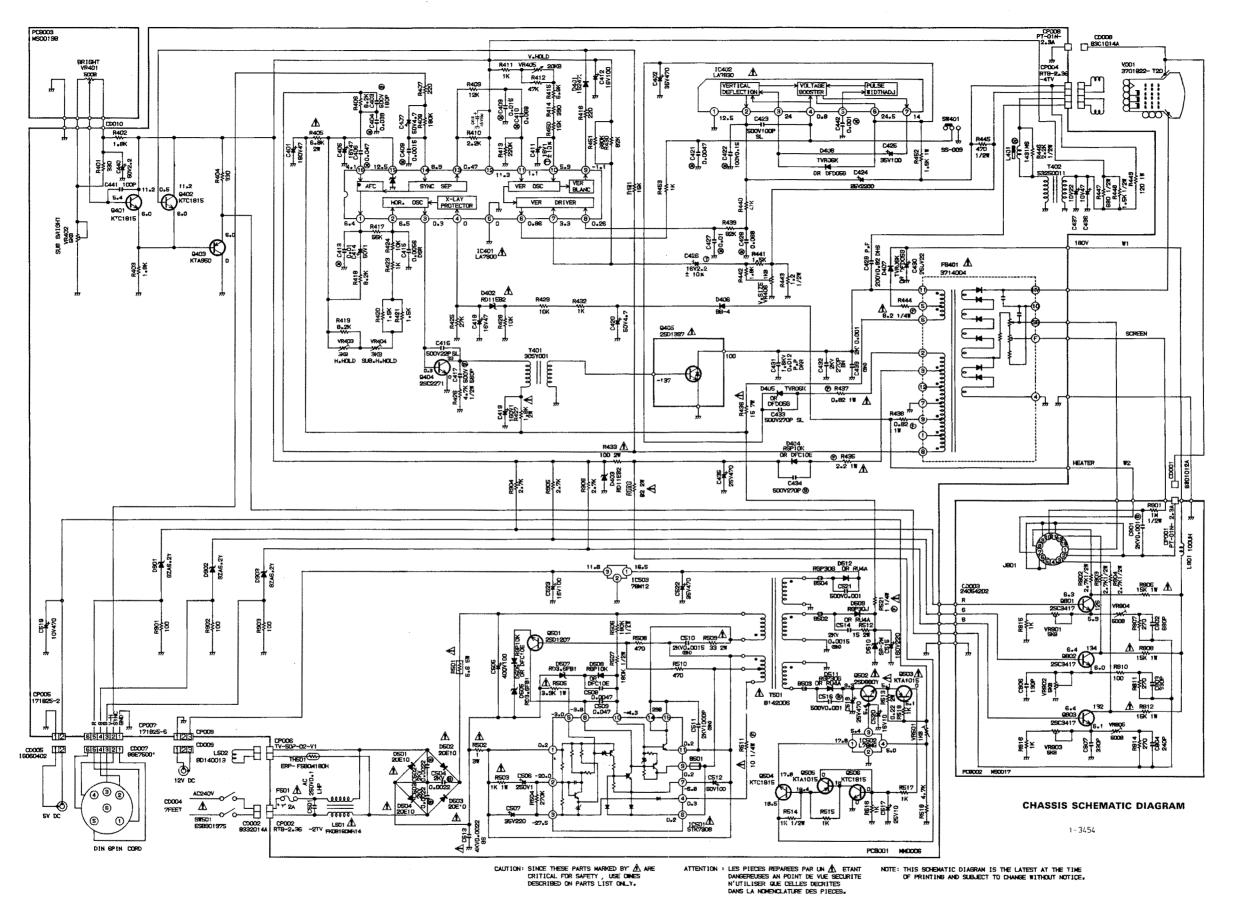


M203-09

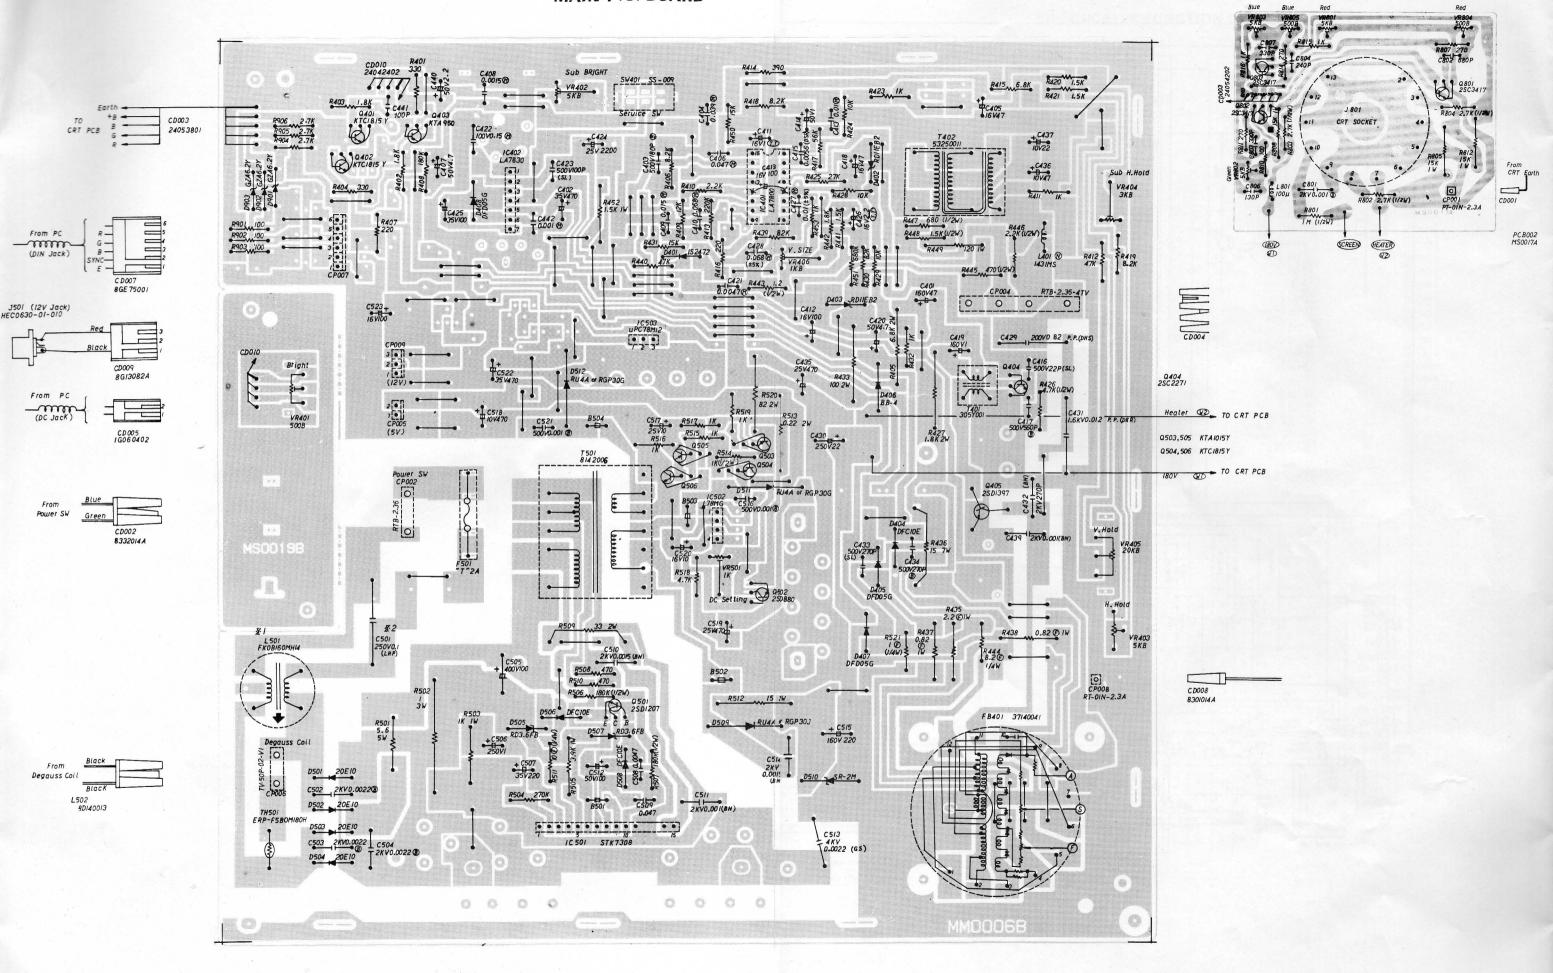


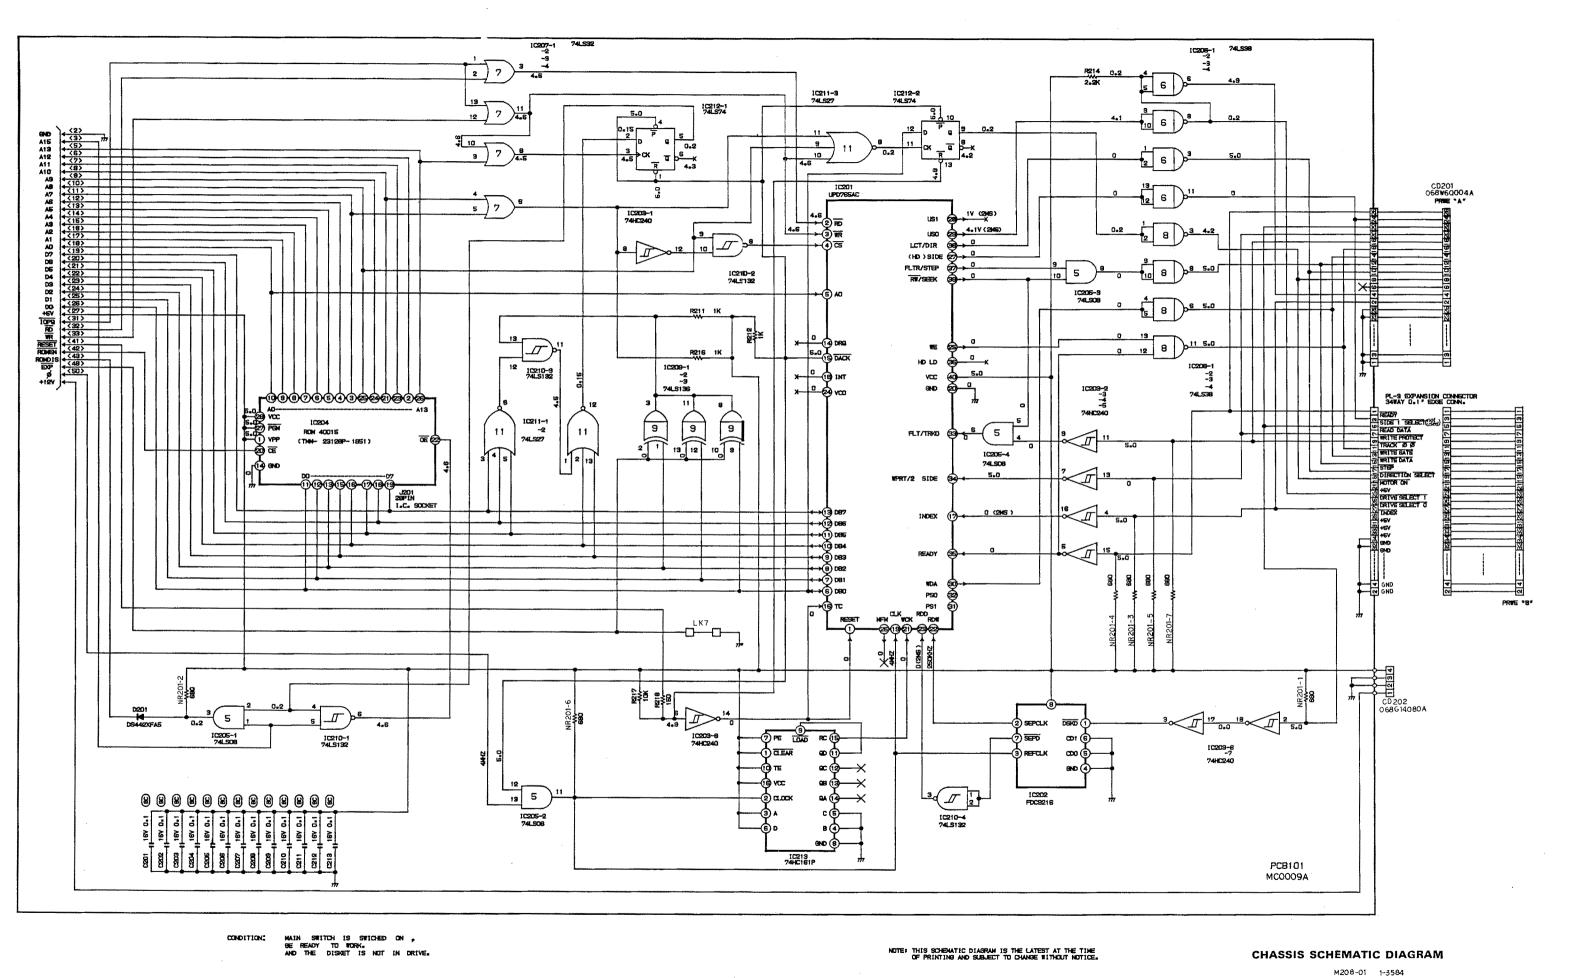

Note: See Page 21 for Electrical Parts List

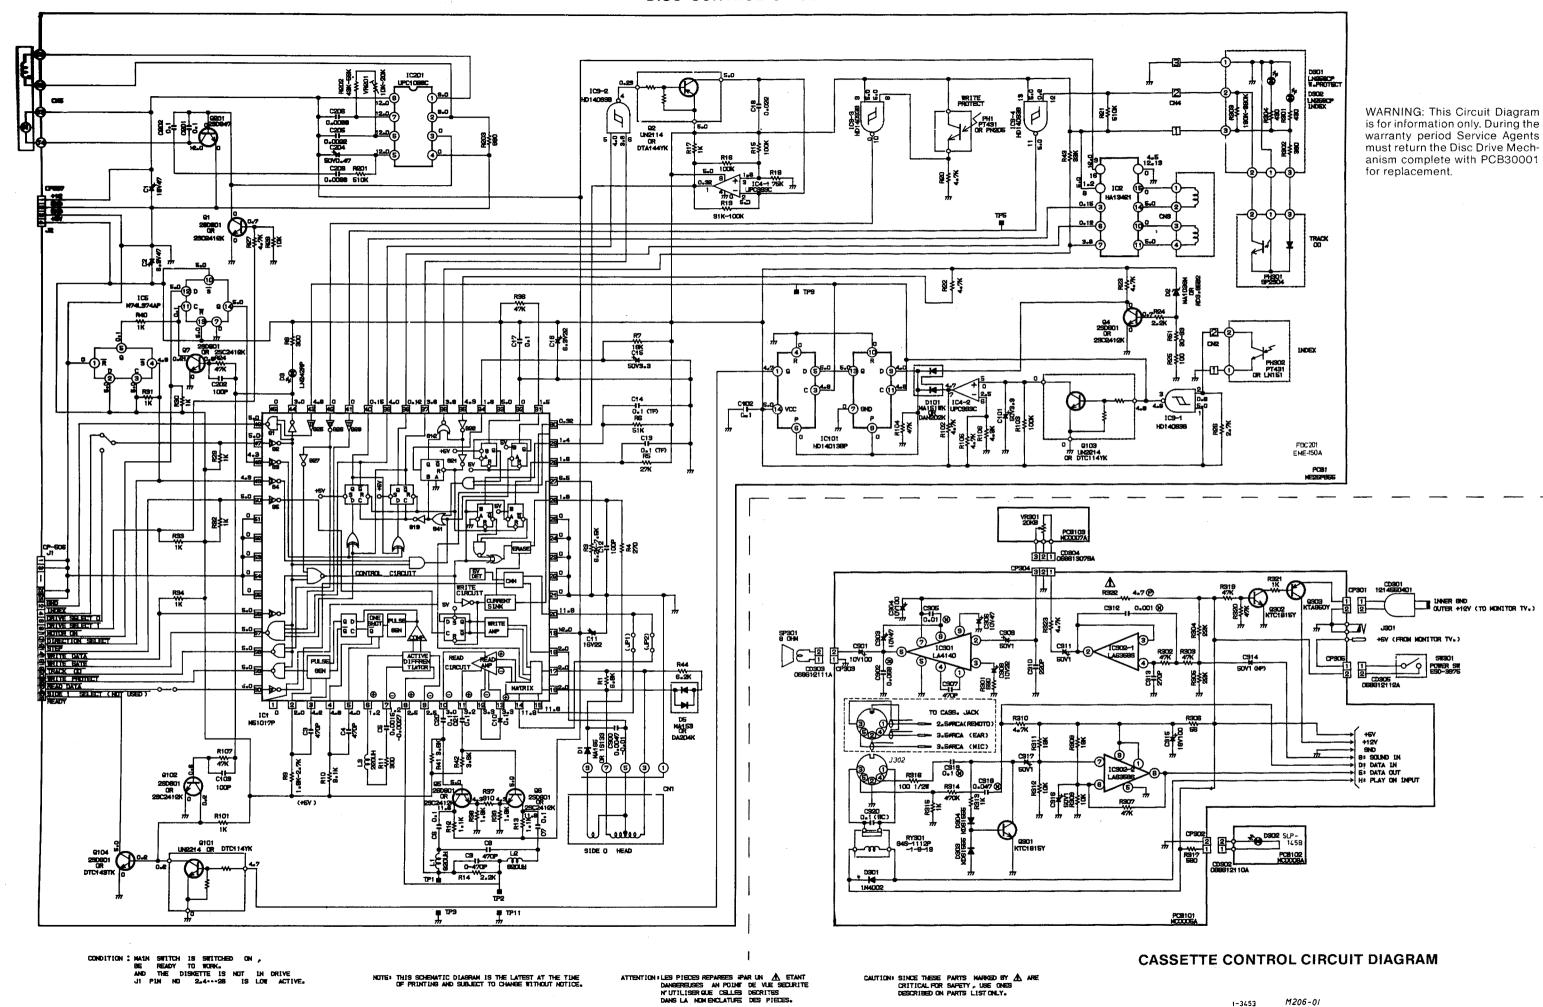


Sym Description Head Assembly 2 Stepper Motor 3 Stepper Motor Rotation Bolt 4 Spindle Motor 5 Flywheel 6 7 Pulley Read/Write Protect/Index/LED P.C.B. 8 Track OO Sensor Assembly Spring 10 Loading Unit

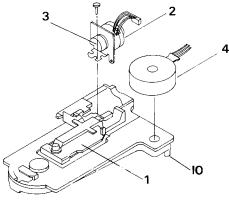

MECHANISM

This drawing is for information only. During the warranty period Service Agents must return the Disc Drive Mechanism complete with PCB30001 for replacement.

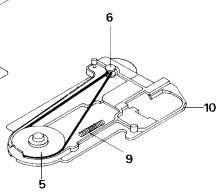

MECHANICAL REPLACEMENTS

Head Assembly

Fig. 6.

- i) Remove 2 screws from F. panel and remove F. panel.
- ii) Remove 4 screws from the control PCB.
- iii) Disconnect plug from Stepper Motor.
- iv) Disconnect plug from LED P.C.B.
- v) Disconnect transistor from Spindle Motor.
- vi) Disconnect Index Sensor from front of P.C.B.
- vii) Raise P.C.B. from side opposite LED and remove plug from head.
- viii) Control P.C.B. will now be free remove.
- ix) Remove 4 screws securing the Loading Unit to the chassis from the Flywheel side and remove Loading Unit.
- x) Remove spring and rod support screws.
- xi) Gently slide the head off the rod.
- xii) Replacement is reverse process.

After reassembly check alignment of Azimuth Burst/Track OO Positioning.

Spindle Motor

- i) Remove transistor fitted to Motor.
- ii) Unplug CN5 from Control P.C.B.
- iii) Remove Drive Belt.
- iv) Undo 2 screws securing motor.
- v) Replacement is reversal of removal.
- vi) Adjust VR201 so Index frequency is 200 \pm 2ms (See Fig. 5-1).

Stepper Motor

- i) Remove Control P.C.B. as (1).
- ii) Remove 2 securing screws for Stepper Motor Bracket.
- iii) Stepper Motor can now be removed.
- iv) After replacement index and positioning must be checked and amended as necessary.

TECHNICAL SPECIFICATION

LSI CHIPS:

Z80A processor running at 4MHz

bytes of RAM arranged in two 64K banks (over 41K

available to user in BASIC, 61K available TPA to

CP/M Plus)

48K bytes of ROM containing BASIC, the operating system

and disc extensions

6845 CRT controller device

AY-3-8912 sound generator chip 3 voice, 8 octaves

8255 parallel I/O device7653 floppy disc controller

DISPLAY SPECIFICATION:

DIGI EMI GI EGII IGMII			
Display Mode	Mode 1	Mode 2	Mode 3
No. of colours	4 from 27	2 from 27	16 from 27
Vertical dots	200	200	200
Horizontal dots	320	640	160
Horizontal characters	40	80	20

KEYBOARD:

74 Keys — qwerty style, numeric cluster, cursor and copy cursor, return, enter, shift, caps, lock, tab, delete, clear, control.

CASSETTE HANDLING:

Write speed software selectable — 1 K baud or 2 K baud, read speed automatically established by software. Motor on/off controlled by software.

ADD-ON ABILITY:

Additional compact floppy disc drive system, type FD-1.

Centronics compatible printer.

Jovstick(s).

Various peripherals including up to 252 additional 16K ROMs.

EXTERNAL SOCKETS:

PCB edge connectors for general purpose expansion and Centronics parallel printer.

Disc drive 2 socket (Use DI-2 connecting lead).

9 Pin D-type socket for joystick (Amsoft type JY2).

6 Pin DIN Socket for

- RGB and sync

- Luminance + sync

5 Pin DIN socket for external cassette recorder. (Use CL1 lead).

3.5mm stereo socket for stereo sound output.

5mm plug and lead to connect 12V (disc) power socket on the monitor.

5mm socket for CPC6128 5v power supply (supplied exclusively from monitor).

DIMENSIONS (mm):

	VV		u
Keyboard	510	48	170
CTM644	375	340	365
GT65	305	315	335
Joystick	90	170	100
Modulator	120	70	170

...

WEIGHTS (Kg):

Kevboard ` '	2.0
CTM644	10.6
GT65	6.3
Joystick	0.3
Modulator	1.4

POWER SUPPLY:

Screen System: 240V AC 50Hz (keyboard and disc drive power supplied by screen system).

CP/M usually assumes an 80 column screen is available. The CPC6128's ability to present text in 80 column format is a prerequisite for the majority of CP/M applications.

Disc System Specification:

The disc drive is a 3 inch system, conforming to the Hitachi/ Panasonic standard. The software is configured for a 12mS step rate, and 30mS settling time.

The system is designed to control a maximum of 2 drives. A ROM contains the extensions for AMSDOS and the machine dependent elements of CP/M and Dr LOGO.

The ruggedly constructed 3 inch discs are usable on both sides, each side is provided with a reusable write protect clip which is slid into position as required.

AMSDOS & CP/M Plus

AMSDOS is a disc operating system which expands Locomotive BASIC, adding additional commands to make full use of the disc files. AMSDOS enables BASIC programs to access disc files in the same manner as cassette files, in fact the same commands are used with file names conforming to CP/M and CP/M Plus conventions. AMSDOS and CP/M both share the same file structure and can read and write each other's files. The Digital Research CP/M Plus operating system is supplied with the CPC6128, permitting the user to access the wealth of applications software written to run under CP/M. In addition to the usual CP/M Plus utilities, additional features have been included for the CPC6128.

Disc Organisation:

Both AMSDOS and CP/M Plus support two different disc formats: System format, and DATA only format.

Format selection is automatic on disc access. Both formats use the same framework, but have different sector configurations.

Common to all:

Single-sided, double density.

512 byte sector size.

40 tracks.

Sectors interleaved 2:1.

SYSTEM format:

The most frequently used format, since CP/M 2.2 and CP/M Plus may only be loaded from a system format disc. 2K is used for the directory, and 9K reserved for the system.

9 sectors per track.

2 reserved tracks for CP/M.

169K byte file capacity.

DATA only format:

All the tracks are used to store data.

2K bytes reserved for the directory.

9 sectors per track.

No reserved tracks.

A

178K byte file capacity.

The CPC6128 is compatible with programs developed for Amstrad CP/M 2.2 and will run Amstrad CP/M 2.2 discs. Programs developed specifically for CP/M Plus with GSX will not run on Amstrad CP/M 2.2. The term CP/M Plus is synonymous with CP/M 3.0.

Either side of an AMSTRAD CP/M Plus or AMSDOS disc may be accessed by the disc controller, depending on which way round the disc is inserted.

Please note that while every care has been taken to ensure compatibility with existing CP/M software, some packages available make use of undocumented features of the CP/M operating system, and these may not be supported by the CPC6128 implementation. Protected cassette files may not be occupied on disc, and care should be taken to observe the copyright conditions of any software when transfering programmes between cassette and disc.

In keeping with our policy of continually improving our service, and the technical quality of our products, we reserve the right to change component types, manufacturers, sources of supply or technical specification at any time.

Keyboard/computer unit, Colour Monitor, Monochrome Monitor — Designed in U.K., Made in Korea.

Joystick — Designed in U.K., Made in Taiwan.

Power Supply/Modulator — Designed in U.K., Made in U.K. Software — Written in U.K. and U.S.A., Made in Korea and the U.K. CP/M Plus, CP/M and Dr Logo are trade marks of Digital Research Inc. AMSTRAD, AMSOFT, AMSDOS, CPC464, and CPC6128 are trademarks of AMSTRAD Consumer Electronics PLC.

AMSTRAD CONSUMER ELECTRONICS plc., Brentwood House, 169 Kings Road, Brentwood, Essex CM14 4EF. Telephone: (0277) 228888